

GP-5105H

GOM-20120306

Magnetic automatic leveling



Feature:

- Four V-lines, four H-line and one floor point are projected in one pass.
- Magnetic compensator ensures more quick self-leveling.
- When using for outdoor, the receiver during the work can be used over 40m of radius.
- When the instrument inclines over $\pm 3^\circ$, the line laser gleams and makes an alarm.
- Rotate fine adjustment mechanism, making it easier to find objects correctly.
- Anti dust and anti water IP-54.

Specification:

Model	GP-5105H(High power)
Beam	4V4H1D
Light sources	635 nm laser diode / down point 650nm
Anti-dust & Anti-water	IP-54
Laser safety class	Class 2 / Class 3A for High power
Accuracy	$\pm 1\text{mm}/10\text{m}$
Self-leveling range	$\pm 3^\circ$
Working range	Radius 30~40m (with detector)
Power supply	3 x AA alkaline batteries / rechargeable batteries
Mounting thread	5/8"X11, ISO standard
Range of operating temperature	$-10^\circ\text{C} \sim +40^\circ\text{C}$
Instrument size	$\Phi 97 \times 195\text{mm}$
Instrument weight	1.2kg (including batteries)
Standard Accessory	Aluminum carrying case, Laser glasses, Alkaline battery, L-shaped acrylic plate, manual



**MADE IN TAIWAN
HIGH POWER**



Option Detector



Option accessory:



Battery charger
Input: AC 100-240V 50/60Hz
Output: DC2.8V
For Ni-MH AA/AAA



Wall bracket
WL-01 / WL-08



L-shaped acrylic plate




Laser Detector
GR-82/81 (5~10K) / GR-80 (10K)
Working distance: 1~50m(radius)
Accuracy: $\pm 1.0\text{mm}$ (0.5~30m)
 $\pm 2.0\text{mm}$ (50m)



Elevator tripod
ETP-290 (180cm)
ETP-1981 (180cm)
ETP-192 (145cm)
ETP-1921 (145cm)
ETP-1922 (145cm)
ETP-191 (120cm)
ETP-1891 (26cm)
Thread: 5/8"

Laser line indication:

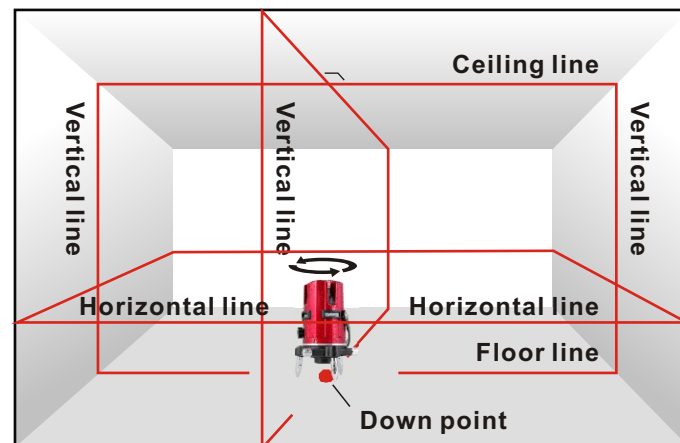

Giant Precision Instrument Co., Ltd.

No.69, Anhe Rd., Zhonghe Dist., New Taipei City, Taiwan (R.O.C.) Zip:23576

TEL: 886-2-2231-7282 FAX: 886-2-2231-7281

Website: <http://en.gpi.tw>