

# Green Beam 3D ALL FUNCTION

## ▶ 3D-360G ◀ Pendulum Leveling Laser

20170815

**NEW**



**20mW**



Made in TAIWAN

### ◎ Feature:

- 3-axis( one horizontal and 2 vertical directions) 360 degree all function line lasers.
- Adopt Green Beam technology which is brighter 3 times than red beam, and the output of green laser beam is more than 5mw to match working range until 25M with detector.
- 3 axis setting-out at the same time to save more than 60% working time and 50% manpower saving. And no other kind of rotary lasers can be done in such short time.
- 3D-360G can be operated within 1cm from the wall by the all function fine-adjusting shifting table. No more trouble and difficult construction job for you.
- Adapt Hi capacity Li-battery technology to reach long working time more than 7 hrs, no more working stopping by low battery problem. And 3D-360G owns 3 kinds power supply design idea.
- Standard accessories: Li battery + Li battery charger + Carry case adjusting shifting table + user manual + reflecting target + glasses.



### ◎ Laser line indication:

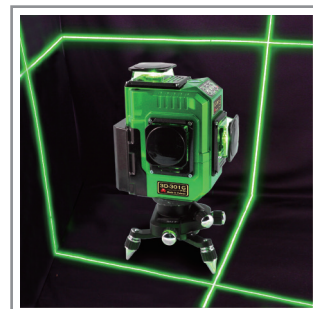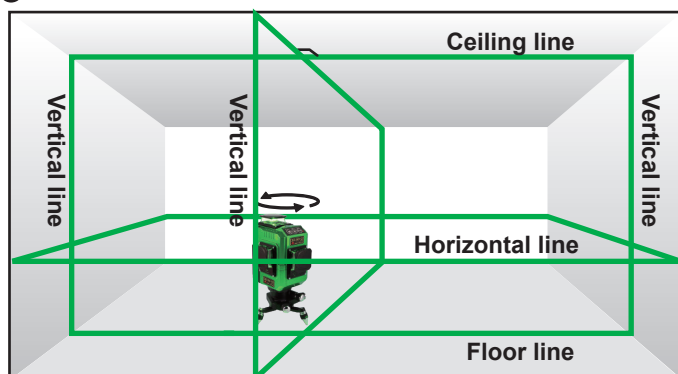

### ◎ Specifications:

Model No.	3D-360G
Laser beam	3D all function / green beam
Light sources	Wavelength 532nm
Anti-water class	IP-54
Accuracy	± 1mm/5m
Self-leveling range	±3°
Working range	Dia. 50m ( with detector )
Power supply	Li-ion battery
Mounting thread	5/8" X 11, ISO standard
Operating temperature	0°C~+40°C
Size	130 x 100 x 140 mm
Weight	0.9kg ( without shifting table ) 1.3kg ( with shifting table )



### Giant Precision Instrument Co., Ltd.

No.16, Ln. 134, Liancheng Rd., Zhonghe Dist., New Taipei City 235, Taiwan (R.O.C.) Zip:23553

TEL : 886-2-2246-7302 FAX : 886-2-2246-7301

Website: <http://en.gpi.tw>